




WINDSHIELD BAG 4

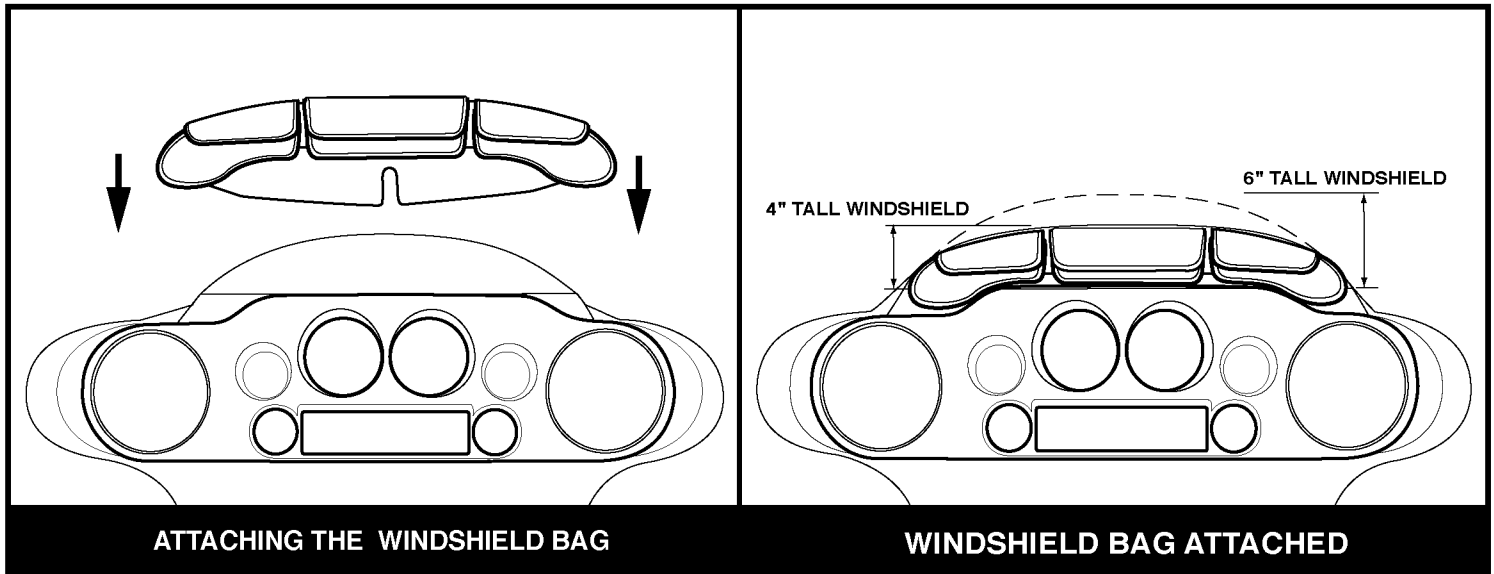

Your PVC leather look windshield bag is designed to fit the 4" & 6" tall faring windshields. Install by loosening the 3 screws that hold your windshield sandwiched between the 2 separate pieces of your faring. Your windshield bag has a thin plastic guide piece with 3 notches in it sewn to the bottom. The thin plastic guide piece with 3 notches will slip down between the windshield and the instrument faring. Make sure the bag is pushed all the way down so the top of the bag is level with the top of the windshield. When this is done tighten the 3 screws to secure the bag into position. Like other windshield bags, **your windshield bag is not 100% weather proof because of the lid construction.** Electronic and other water sensitive gear should be removed when riding in the rain.

NOTICE: When purchased through an authorized T-Bags dealer, all CDL ENTERPRISES, LTD., products are warranted to be free from all manufacturing defects in materials and workmanship for the normal life of the product. This Lifetime Warranty does not cover damage resulting from abuse, neglect, improper use, or normal wear and tear. CDL ENTERPRISES, LTD., its distributors and dealers issue no warranty and assume no liability for damage caused by use of this product other than as recommended. Load only in compliance with your owner's manual.